

Svara Functional overview



Welcome to the Vent-Axia Connect App

This guide will in a few quick and simple steps take you through the process of connecting with your new Vent-Axia product.



QUICK SETUP

These slides are designed to aid in the set up and demonstration of the Svara app controlled fan.

The fan can be used without the app and revert to factory settings.




Type in the Pin code of your product or use your camera to scan it automaticly Pin Code Pin Code O CONNECT Type in the Pin code of your product or use your camera to scan it automaticly Scan it automaticly O CONNECT

Each fan has a unique pin number which you can find on the F&W or Motor pcb. The fan will display a white light to show communication is taking place.

Due to the continuous running function and the max air flow this can also be used as a kitchen fan.



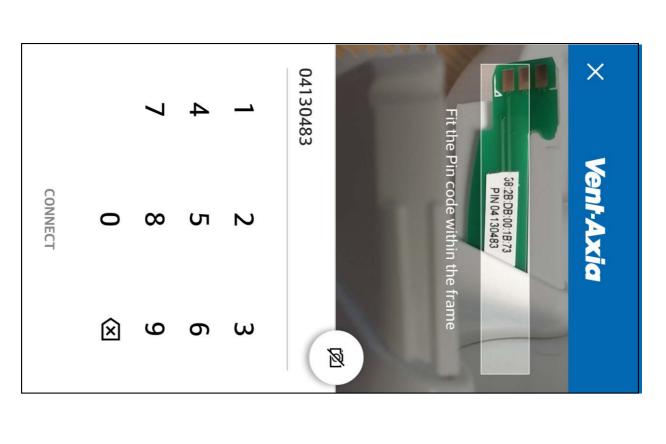


If you do not have the F&W, the pin code is situated on one of the two inserted arms.

This can be accessed by simply removing the centre impeller housing by pulling towards you.

This action also allows the owner/user to clean inside the ducting in a simple and accessible manner.



×

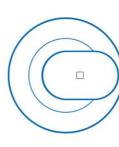

Enter the name of the device

If you have more than one fan in the home, you can re name them to suit their locations.

For example

- Family Bathroom
- En-Suite 1
- En-Suite 2
- Spare Room
- Utility Room
- Kitchen




X Vent-Axia Bathroom fan

The name will appear in the full list and gives the user the reassurance that they have selected the correct fan before proceeding to change the settings or functionality.



X

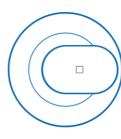

Will your fan be activated using a remote switch into the Switched Live? (can be combined with backdraft shutter, sensors will be disabeld)

NO

YES

If replacing a standard basic fan or pull cord fan and have two wires, select no.


If replacing a timer fan and have three wires present you can press yes.

However due the over run timer being part of the programmable functionality this is controlled by the app and therefore can be used in either case.

Switch Live is not needed to operate an over run timer as it is with other fans.



× Vent-Axia

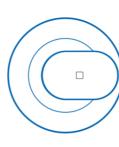

Do you want your fan to be intermittent (saying no will set the fan to run continuously)

YES NO


The fan can also be used as an intermittent fan.

However for best results please select no and use as continuous running fan.

As well as enhanced performance the running costs are lowered when this option is selected.



×

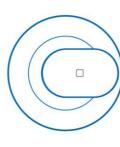

Will the fan by used to move hot air from one room to

another?

YES


NO

to move heat between rooms extractor fans are often used In the Scandinavian market

select no. function in the UK, therefore It is unlikely to be used for this



X

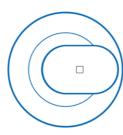

CONGRATULATIONS

You have almost completed the initial setup of your Vent-Axia Svara. The app will give you access to setting fan speeds and intelligent features such as silent hours and automatic ventilation cycles.

FINALISE SETUP

CANCEL

Congratulations once you have linked the fan, you can proceed to setting the individual fans the way you want.

Providing you with the most controllable and flexible fan available.







Bathroom fan Vent-Axia Svara Available

Version 1.1.1

Vent-Axia is a Volution Group

Company


Report a problem



Once the set up is complete you can select the individual fan from the list.

You can then begin to enjoy the flexibility and controllability of the Svara.




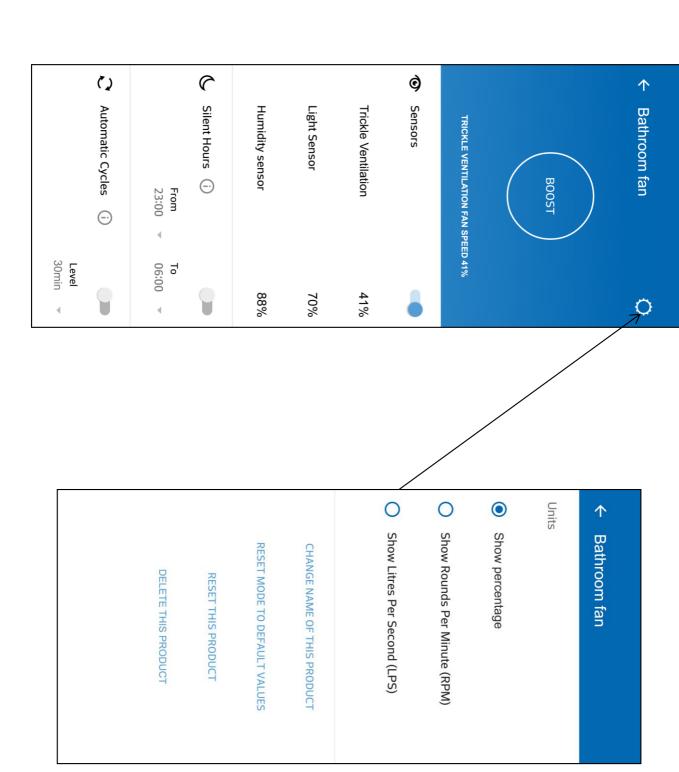


By selecting the options cog at the top of the page you can make some functional changes.

Select how you want to display the airflow. We would suggest selecting the LPS display option. This way when adjusting the sensitivity of the individual functions it will be measured in the air moved.



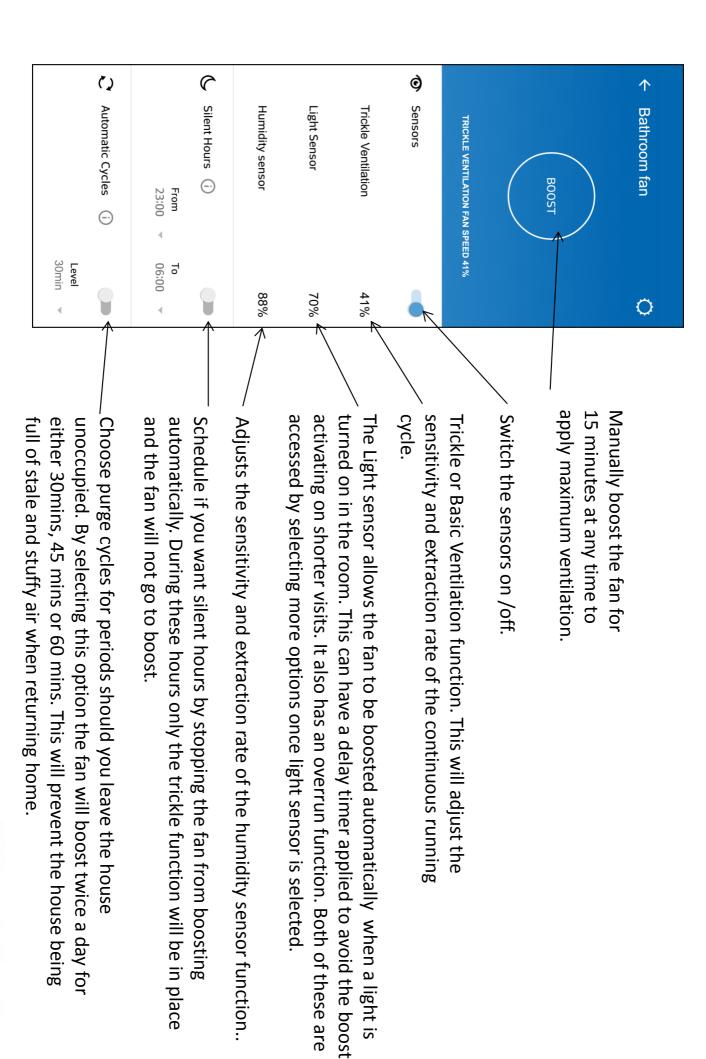



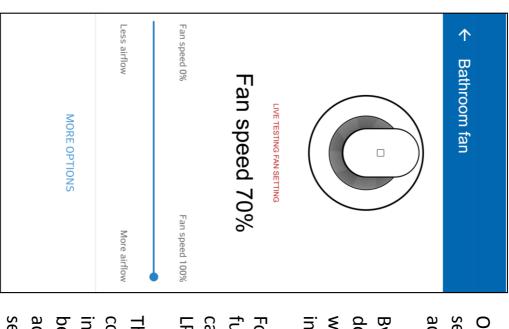


Once each of the individual sensors have been selected the adjustment is simple.


By simply sliding the bar up and down the amount of air moved when the function is activated is increased or reduced.

For example when the humidity function is activated the air flow can be adjusted from 22 LPS to 30 LPS.

This gives the end user total control as well as having the individual functions being able to be turned on and off you can also adjust the functionality of the settings.

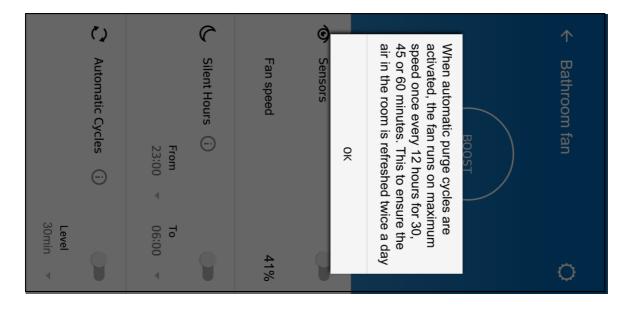




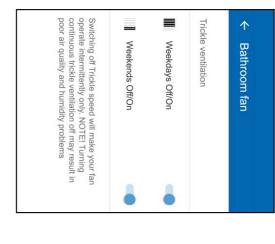

Select if you want to switch trickle/basic speed off

Select sensitivity, overrun and delay start periods for the light sensor. This is obtained by selecting more options once light sensor has been accessed.

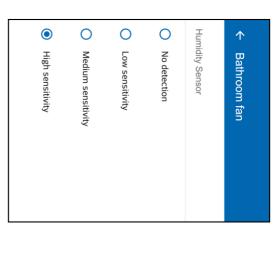

Select sensitivity of the humidity sensor. This adjusts the amount of humidity required to activate the function. Then you can use the sliding scale to increase or decrease the air moved in the function.



controlled fan. The NEW Svara from Vent-Axia. The UK's first App

it extremely low cost to run. The Fan benefits from a DC Lo Carbon motor making

Homes, caravans, boats etc. It also has a 12V input allowing it to be used in Motor

5 year warranty.

Stylish modern Scandinavian design.





