


Svara Pin Code

X **Vent-Axia**

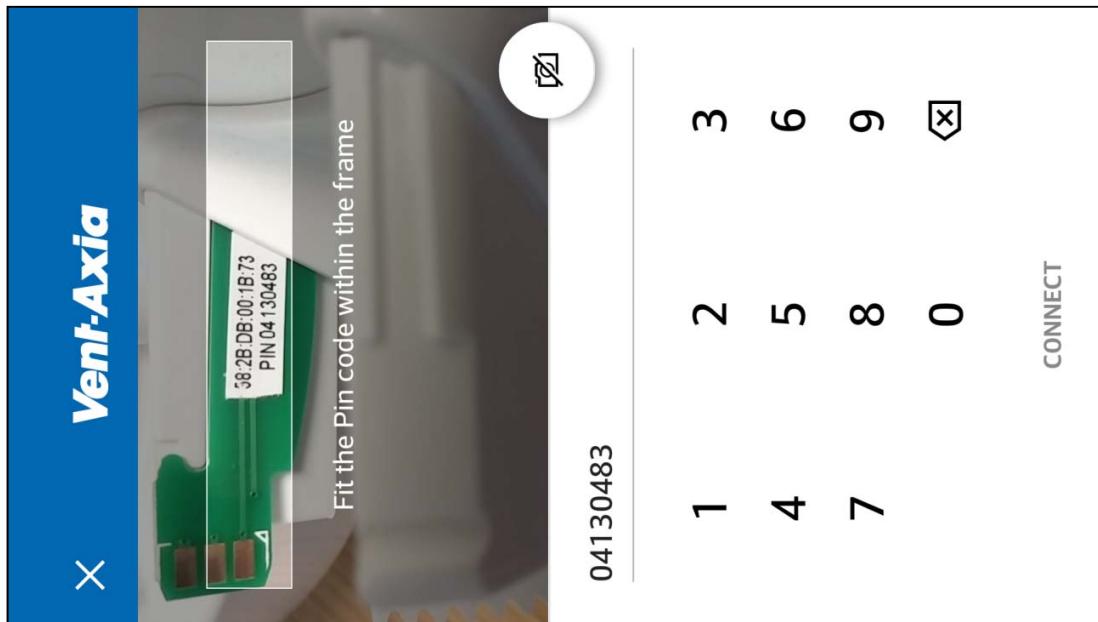

04130483

1	2	3	6
4	5	8	9
7	0	CONNECT	

If you do not have the F&W, the pin code is situated on one of the two inserted arms.

This can be accessed by simply removing the centre impeller housing by pulling towards you.

This action also allows the owner/user to clean inside the ducting in a simple and accessible manner.

Vent-Axia®