


Thank you for purchasing this product.
Please read the instructions carefully before use to ensure safe and satisfactory operation.
Please retain these instructions for future reference.

Warning

Please ensure that you have the correct clearances around the luminaire. Refer to the luminaire instructions for reference.
Insulation and other materials should be cleared away from the area covered by the firehood.
Ensure that the firehood is the correct size for the luminaire. The firehood requires a minimum clearance of 35mm above and 100mm each side of the luminaire.
Good ventilation must be maintained around the installed firehood and luminaire.

Layout




Plan the desired layout carefully, ensuring the cables will reach the distance between the junction boxes and the light fittings.

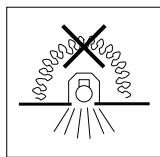

Ensure free movement of air around the fitting by removing any roof void insulation from at least 140mm around the hole.
Under no circumstances must these fittings be covered with insulating matting or similar material.

Installation

- Fold the fire hood up by hand and pass through the aperture cut for the luminaire. Ensure that the metal retaining straps can still be reached.
- Use the handle of a tool (e.g. a hammer or screwdriver) to expand the firehood out to its correct size. Ensure that the firehood is upright. **Warning: Do not use sharp edges to expand the firehood, as this could damage the material.**
- Ensure that the firehood is correctly positioned before securing into place. Fold the metal strap into position as shown and tack into place. Remove any excess material.

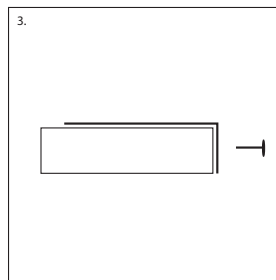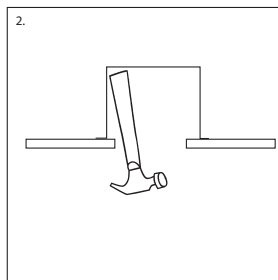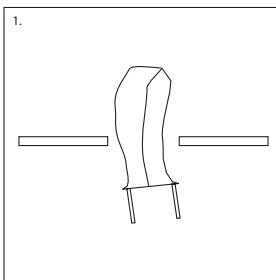

UK Manufacturer: BH17 7BY
EU Manufacturer: Brilliant AG,
Brillantstrasse 1, D-27442 Gnarrenburg

www.saxbylighting.com

V2 20/06/2022

Saxby Lighting

Instruction leaflet

Heatguard

FH150, 50005, 50006



UK
CA CE

saxby
lighting