

INSTALLATION & MAINTENANCE MANUAL

CL219xxx / CS219xxx / FP219xxx SF219xxx

## **GENERAL INSTRUCTIONS**

These instructions should be read carefully and retained after installation by the end user for future reference and maintenance.

These instructions should be used to aid installation of the following products: CL219xxx / CS219xxx / FP219xxx / SF219xxx

# **SAFETY**

- This product must be installed in accordance with the latest edition of the IEE Wiring Regulations (BS7671) and current Building Regulations. If in any doubt, consult a qualified electrician
- · Please isolate mains prior to installation or maintenance
- Check the total load on the circuit (including when this product is fitted) does not exceed the rating of the circuit cable, fuse or circuit breaker.
- Please note the IP (Ingress Protection) rating of this product when deciding the location for installation
- Do not overload this accessory or subject it to conditions outside its rating (LED load 5 150W; incandescent / halogen load 10 - 200W; not suitable for fluorescent lamps)
- · This product is for indoor use only

## **INSTALLATION**

- Please check compatibility with intended load before installation. Ensure a mixed load is not selected, i.e.
  incandescent mixed with LED. It is recommended to use lamps/luminaires of the same brand and type on
  the same switch
- · Ensure the wall surface is flat and smooth
- This unit is fitted with a gasket this must not be removed: the gasket is to stop discolouration of the plate
  due to natural moisture in some wall finishes. This product must be fitted only after painting and decorating is
  complete

- Screwless products only remove the front plate by placing a medium size flat-head screwdriver in the notch at the side and lever off gently
- Connect for one-way control (Fig. 1) or two-way control (Fig. 2), ensuring the correct polarity is observed (terminal positions may vary). Switched Live (blue) must have brown sleeving.
- Two-way switching with a dimmer can only be achieved when there is only one dimmer in the system. Twoway dimming cannot be achieved.

#### ONE-WAY DIMMING CONTROL

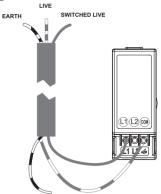


Fig. 1

#### TWO-WAY DIMMING CONTROL

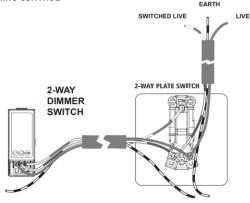


Fig. 2

- For a multiple gang dimmer repeat the wiring method for each dimmer unit.
- All earth connections must be made and maintained. Use green/yellow sleeving on earth conductors that are not insulated
- Check all electrical connections are secure with all exposed copper within the terminal and no loose strands
  of cable
- Fit the unit into a suitable wall box taking care not to compress, damage or trap any cables, and secure with
  the screws provided. If using metal mounting boxes with four lugs, remove the top and bottom lugs or bend
  fully back
- Screwless products only clip the front plate onto the main assembly ensuring the screwdriver notch is at the side
- Switch on and check for correct operation
- A small audible buzz may be emitted when using certain products. This is normal but may be improved by selecting the appropriate mode (see below)

# **DIMMING ADJUSTMENT**

### To restore factory settings:

- 1. Switch on the power and turn the dimmer to the minimum position (anti-clockwise)
- 2. Press the knob 8 times (roughly twice per second)
- The unit will increase and decrease the brightness twice to indicate that the dimmer is in configuration mode, it will then maintain a low illumination level or switch off

## To adjust the minimum dimming level:

- 1. After restoring factory settings, slowly adjust the brightness to a suitable level
- 2. Press the knob 4 times (roughly twice per second)
- 3. The unit will increase and decrease the brightness once the adjustment is complete

### To change between trailing-edge and leading-edge mode:

- 1. Switch on the power and adjust the dimmer knob to the maximum position (clockwise)
- 2. Press the knob OFF ON and wait for the lamp to reach full brightness; immediately repeat OFF ON another 4 times, waiting for the lamp to reach full brightness each time (total 10 presses). The load will come on, and then dip once to indicate that the dimmer is in trailing-edge mode, or twice to indicate that it is in leading edge mode

## **WARNING**

This product must be disconnected from the circuit if subjected to any high voltage or insulation resistance testing. Irreparable damage will occur if this instruction is not followed.

# **GENERAL**

This product should be recycled in the correct manner when it reaches the end of its life. Check local authorities for where facilities exist.

Clean with a soft dry cloth only, do not use aggressive cleaning products or solvents which may damage the product and invalidate the warranty.

# **WARRANTY**

This product has a warranty of 2 years from date of purchase. Failure to install this product in accordance with the current edition of the IEE Wiring Regulations (BS7671), improper use, or removal of the batch code will invalidate the warranty. If this product should fail within its warranty period, it should be returned to the place of purchase for a free of charge replacement. ML Accessories does not accept responsibility for any installation costs associated with the replacement product. Your statutory rights are not affected. ML Accessories reserve the right to alter product specification without prior notice.

230V 50Hz









### SUPPLIED BY:

(UK) MANUFACTURER ML ACCESSORIES LTD, UNIT E CHILTERN PARK, BOSCOMBE ROAD, DUNSTABLE LU5 4LT, WWW.MLACCESSORIES.CO.UK (EU) AUTHORISED REPRESENTATIVE SLV LIGHTING GROUP,

DAIMLERSTRASSE 21-23, 52531 ÜBACH-PALENBERG, GERMANY **EMAIL:** EPREL@GROUP.SLV.COM

DCJUN23\_V1