



Combined

data sheet

RASOFT

PC PROGRAMMING SOFTWARE



 
### WHAT IS IT ?

Designed for commissioning and programming Rako dimming and switching systems, using a computer.

Requires a Rako RAUSB or ethernet bridge, avoiding the need for fly-leads plugged into dimmers and wall plates.

Backup and restore saved project files, ensuring system configurations are never lost.

The RASOFT PC programming software enable advanced features to be accessed on a Rako system

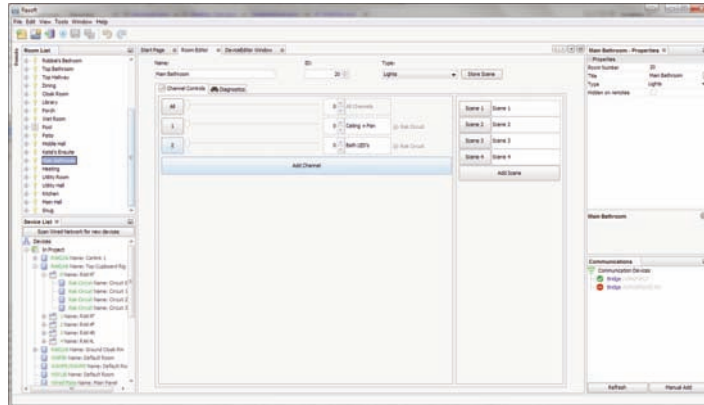

### ADVANCED CONTROL

The RASOFT PC programming software allows Rako systems to be commissioned quickly and easily, with the added feature of access to advanced features. The software uses the RAUSB or an ethernet bridge to create a wireless link between the computer and Rakom receiver modules.

Advanced features include:

- Channel Controls - Dimmer module commissioning & programming
- Profile Editor - Dimmer load curve editor
- Fade Rates - Scene fade rates and raise/lower button modification
- Partition Setup - RAIPC intelligent partition module setup
- Volt Free - RAVFR volt-free interface setup
- PIR - RAPIR motion sensor setup
- Infra Red - RAVIR infrared interface module setup
- Relay - RACUB relay module configuration
- Mapping - RAK4 dimming system configuration for RxLink receivers
- Events - Astronomical timeclock programming
- Mapping - Rakom signal mapping
- Macros - Complex sequencing and "pathway of light" scenarios
- Holiday - TCM Timeclock holiday recording viewer
- Reports - Automatic report compiler for O&M manual creation
- Tools - Restore factory default configurations

\* Images and screen shots for illustrative purposes only.



Combined

data sheet

RASOFT

PC PROGRAMMING SOFTWARE



## system requirements

 
- minimum hardware
- IBM Compatible PC
  - 1x USB 1.1 or 2.0 Port
  - 1x 9 Pin Serial Port\*
  - 64 Megabytes of RAM
  - 100 Megabytes of free disk storage
  - 1024x768 screen resolution
  - RAUSB - USB to Rakom RF interface

- platform
- Windows 98 Second Edition
  - Windows 2000
  - Windows XP
  - Windows Vista

- notes
- We recommend updating your version of Windows with the latest security and program updates before installing the RASOFT software.


## screen shot

Wired plate set-up

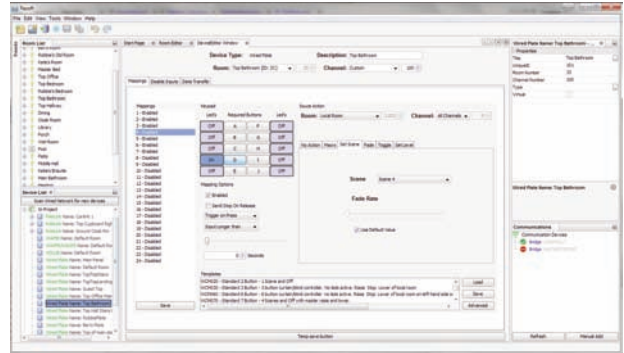


## screen shot

 Device editor

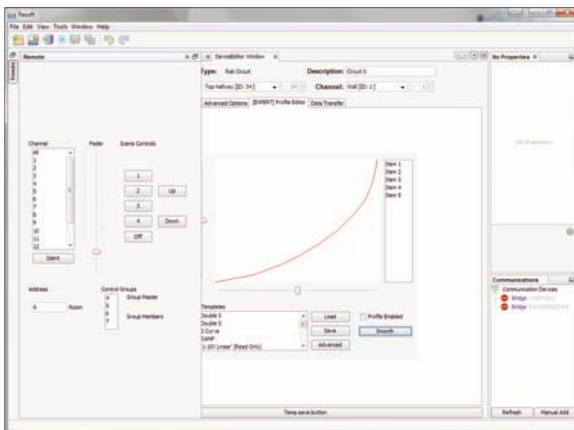

## screen shot

 Rak-Link mapping

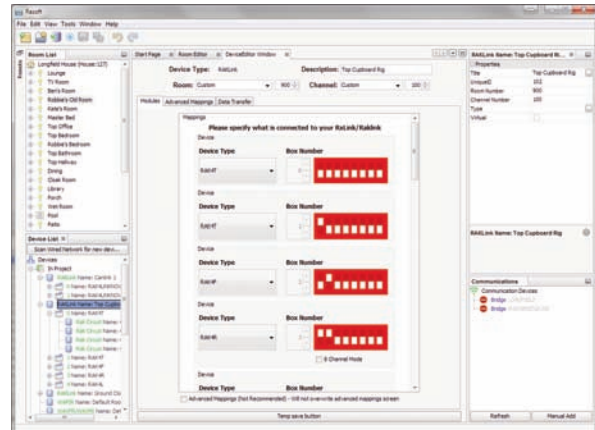

telephone +44 (0) 1634 226666 fax +44 (0) 1634 226667 www.rakocontrols.com

WE RESERVE THE RIGHT TO CHANGE THE SPECIFICATION AND DATA HERewith WITHOUT NOTICE.

© 2012 RAKO CONTROLS LIMITED