


Ref : 7649

This product is guaranteed against any manufacturing defect for a period of 2 years

TECHINCAL DATA

Remote	Dimensions	120x52x20mm
	Power supply	AAA *2pcs
	Material	ASS
Controller	Dimensions	85x45x23mm
	Supply Voltage	DC12V ~ 24V
	Control Mode	RGB 3 channel/ 4 channel
	Power per channel	6A
	Control distance	30m
	Numbers of programs	9

FONCTIONS

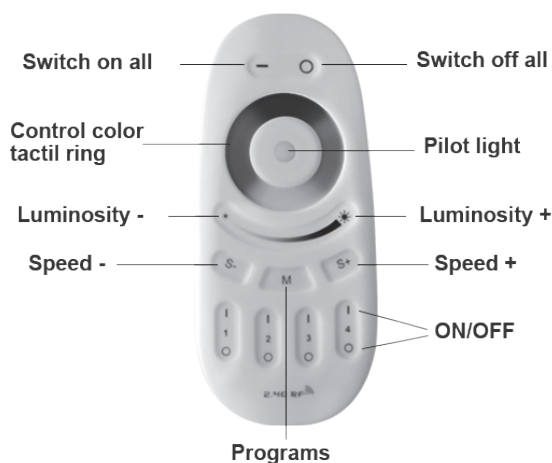

- Hold down "ON" key during 2 seconds to get the white light.

- Set de colors using the tactile color ring.

- Set the luminosity using the tactile arch (-/+)

- To control 4 zones at the same time press "(-) switching on all"

The remote work with AAA/LR3 batteries (not included)

IP20

2.4 GHz



PROGRAMS

Press « M » key to select a program

- Program 1: red, green, blue and white
- Program 2: red, green, blue, yellow, purple
- Program 3: DISCO, random color flickering
- Program 4: red flickering 3 times and alter from 0 to 100%
- Program 5: green flickering 3 times and alter from 0 to 100%
- Program 6: blue flickering 3 times and alter from 0 to 100%
- Program 7: random color change with flickering
- Program 8: in chain color changing
- Program 9: white flickering

ATTENTION

- The product is used in kit (remote control and controller).
The user can reprogram freely according to his needs. A single remote control can control uncountable controllers, but a controller can be controlled only by four remote controls maximum.

To connect a LED STRIP to the remote


- Choose a cannel between 1 and 4
- Disconnect electrically the LED STRIP which you want to associate.
- Reconnect the LED STRIP and before 3 seconds press once "ON" key of the chosen zone.
- Once the connection is done the LED STRIP will flick 3 times

To dissociate a LED STRIP from a zone

- Check with the remote which zone is connected to the remote
- Disconnect electrically the LED STRIP
- Reconnect the LED STRIP and before 3 seconds press 5 times "ON" key of the chosen zone.
- Once the connection is done LED STRIP will flick 6 times

Control Multiple

You can connect several devices according to the combination you chose. See the example below.

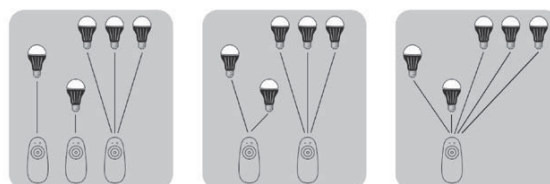

FR
Cet appareil
et ses accessoires
se recyclent



À DÉPOSER
EN MAGASIN



À DÉPOSER
EN DÉCHÈTERIE

OU

Points de collecte sur www.quefairemesdechets.fr
Privilégiez la réparation ou le don de votre appareil !



7649