# Pairing Instructions

**Match**

1. Short press the Match key.
2. Immediately press the ON/OFF key on the touch panel.

The LED indicator will flash rapidly several times, indicating that pairing is successful.

**Delete**

Press and hold the Match key for 5 seconds to delete all pairings.

The LED indicator will flash rapidly several times, indicating that all paired remotes have been deleted.

ALL LED®

**INSTALLATION GUIDE & USER MANUAL**

# ASC/PX/WSW/1Z

**ENSURE POWER SUPPLY IS OFF WHEN HANDLING ANY ELECTRICAL EQUIPMENT.**

** DIAGRAMS ARE FOR ILLUSTRATIVE PURPOSES ONLY **

# Returns & Faulty Items

- If any problem is encountered during or after installation, please call ALL LED technical department to get the problem resolved as soon as possible.
- Please do not just return the item to the outlet you purchased it from, as you are only entitled to a replacement or refund after the unit has undergone testing and the unit has been confirmed as having a manufacturing defect/fault. Your statutory rights are not affected.
- The manufacturer will not be deemed liable or held responsible for any damages caused by faults or manufacturing defects that may be present in any of its products or the misuse or incorrect installation of this device.
- All installations must be carried out in accordance with this installation guide and user manual.
- All goods are supplied under the terms and conditions of ALL LED LTD, a copy of which may be obtained upon written request.

**ATTENTION**

**IF ANY PROBLEMS PERSIST, PLEASE CALL THE ALL LED TECHNICAL DEPARTMENT FOR FURTHER ASSISTANCE.**

**Environmental Protection** Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.

The manufacturer will not be deemed liable or held responsible for any damages caused by faults or manufacturing defects that may be present in any of its products or the misuse or incorrect installation of this device. Your statutory rights are not affected.

**ALL LED LTD** 42 Sedgwick Road, Luton, LU4 9DT
www.allledgroup.com sales@allledgroup.com Tel: +44 (0)208 841 9000

# Key Function




ON/OFF

Turn on/off light.

Touch the RGB wheel to select the colour.

Short press: Switch the colour of the dynamic mode in sequence
(e.g. Red, Orange, Yellow, Green, Cyan, Blue, Purple, White, R/G/B 3-colour, 7-colour).

Long press for 2s: Set 6 levels of colour saturation (80%, 60%, 40%, 20%, 0%, 100%) in sequence, i.e., transition the current colour to RGB mixed white.

MODE

Short press: Switch the change type of the dynamic mode in sequence (e.g. static, flow, chasing light, pile-up, floating, tail dragging, tail dragging + black segment, bouncing, shuttle, jump,fade, breath, flashing, chaotic flashing).

Long press for 2s: Set the first change type (static).

SPEED

Short press: Switch 10 levels of speed in sequence.

Long press for 2s: Switch the direction of light movement in sequence (e.g. forward, backward,round trip, both sides to centre, centre to both sides, curtains open and close).

BRIGHT

Short press: Switch 5 brightness levels in sequence (100%, 80%, 60%, 40%, 20%).

Long press for 2s: Get maximum brightness 100%.

SCENE 1

4 Scene storage.

Short press: Call up scene 1-4.

Long press 5s: Save the current lighting effect to scene 1-4.

Note: The remote control will automatically get the number of dynamic mode colour, the number of change type, and the number of light movement direction from the SPI controller.


**Scene Lock**

- Scene keys can be set to a locked status, which disables the function of long pressing for 5 seconds to save a scene (default: scenes are unlocked).

- To lock all scene keys:
  1. Short press the panel ON/OFF key to turn the light on, then turn it off.
  2. Immediately press and hold the panel ON/OFF key for 5 seconds.
  3. Then immediately press and hold any scene key for 5 seconds.

- To unlock all scene keys:
  1. Short press the panel ON/OFF key to turn the light on, then turn it off.
  2. Immediately press and hold the panel ON/OFF key for 5 seconds.
  3. Then immediately press and hold any scene key for 10 seconds to restore all scene keys to the unlocked state.

# Installation

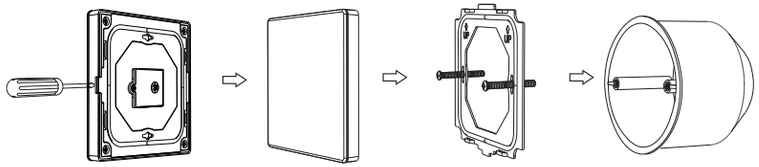


Uninstall Touch panel Baseplate Base

Three options are available for mounting the panel:

Option 1: Fix the panel to the wall with two screws.

Option 2: Attach the panel to the wall using adhesive tape.

Option 3: Attach the panel directly to a metal surface using magnetic adsorption.

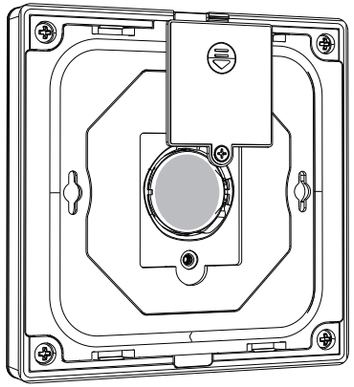

Note:

1. Before first use, please remove the protective film from the battery.
2. Open the battery cover with a screwdriver.
3. If the LED indicator does not light up when a key is pressed, the battery may be dead or there may be poor contact caused by repeated insertion and removal. Please replace the battery or use a screwdriver to gently lift the battery contact spring