
Key information

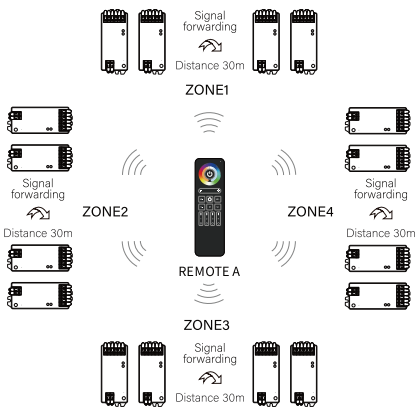

1. **A receiver can only be paired to one zone per remote control.**
   For example:
   - If a receiver is paired to Zone 1 on Remote Control A, it cannot also be paired to Zones 2, 3, or 4 on the same remote.
   - However, it can still be paired to any zone on a different remote control.
2. **A receiver can be paired with different remote controls.**
   For example, Receiver X can be paired with:
   - Zone 1 on Remote Control A, and
   - Zone 2 on Remote Control B.
3. **One zone on a remote control can control multiple receivers at the same time.**
   For example, Zone 1 on Remote Control A can be paired with up to 20 receivers simultaneously.
4. **Receivers paired within the same zone will operate in sync.**
   When multiple receivers are linked to the same zone, they will synchronise effects and colour changes together within a 30-metre open-space range.
5. **Different zones can control different lighting types or settings.**
   For example:
   - Zone 1 could control a single colour LED strip.
   - Zone 2 could control colour temperature adjustment.
6. **If the remote control is not operating correctly, please check the following:**
   - Double press Zones 1, 2, 3, and 4 to confirm they are paired correctly. If not, repeat the pairing process.
   - Check that the receiver indicator light is showing the correct mode colour.
   - Inspect all wiring connections for loose connections or incorrect wiring colours.

PWM Frequency Switching (Remote Control Only)

Switch to high frequency PWM -16KHz

Short press ⏻ 4 times within 4 seconds, then short press [M] 2 times, after that the receiver will switch to high frequency 16KHz (The light will blink 4 times).

Switch to low frequency PWM -1KHz

Short press ⏻ 4 times within 4 seconds, then short press [M] 2 times, after that the receiver will switch to low frequency 1KHz (The light will blink 2 times).

ALL LED®

INSTALLATION GUIDE & USER MANUAL

AWC/4Z/RMT

ENSURE POWER SUPPLY IS OFF WHEN HANDLING ANY ELECTRICAL EQUIPMENT.

** DIAGRAMS ARE FOR ILLUSTRATIVE PURPOSES ONLY **

Returns & Faulty Items

- If any problem is encountered during or after installation, please call ALL LED technical department to get the problem resolved as soon as possible.
- Please do not just return the item to the outlet you purchased it from, as you are only entitled to a replacement or refund after the unit has undergone testing and the unit has been confirmed as having a manufacturing defect/fault. Your statutory rights are not affected.
- The manufacturer will not be deemed liable or held responsible for any damages caused by faults or manufacturing defects that may be present in any of its products or the misuse or incorrect installation of this device.
- All installations must be carried out in accordance with this installation guide and user manual.
- All goods are supplied under the terms and conditions of ALL LED LTD, a copy of which may be obtained upon written request.

ATTENTION


IF ANY PROBLEMS PERSIST, PLEASE CALL THE ALL LED TECHNICAL DEPARTMENT FOR FURTHER ASSISTANCE.

Environmental Protection Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.


The manufacturer will not be deemed liable or held responsible for any damages caused by faults or manufacturing defects that may be present in any of its products or the misuse or incorrect installation of this device. Your statutory rights are not affected.

ALL LED LTD 42 Sedgwick Road, Luton, LU4 9DT
www.allledgroup.com sales@allledgroup.com Tel: +44 (0)208 841 9000


Installation Instructions



Tear off the back tape

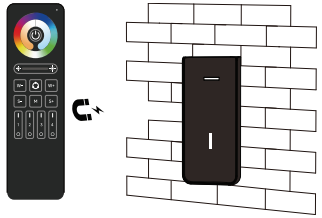

Mount the base plate first, then attach the remote control panel magnetically.

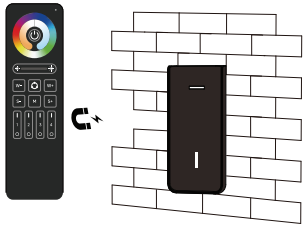


If the mounting surface cannot be fixed with double-sided tape, the bottom plate can be removed from the base.

Fix the bottom plate with screws, and then install the base onto the bottom plate.

Pairing / Unpairing Instructions

Pair with remote control

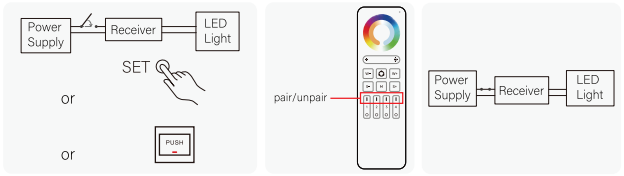

1. Set the receiver into pairing mode. Pairing mode will remain active for 10 seconds. This can be done using any of the following methods:

- Switch the power supply on.
- Press and hold the “SET” button.


- Press the “Push” switch to turn the light on.

2. Within 3 seconds, press your chosen zone button on the remote control 3 times.

3. The light will blink slowly 3 times to confirm successful pairing.

If the light fixture does not blink, it means the pairing has failed. Please repeat the steps.

Unpair with remote control

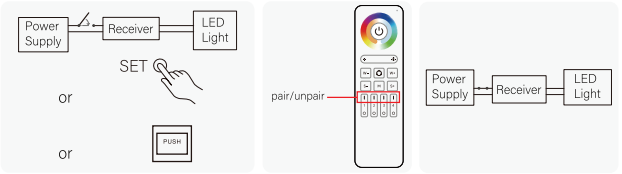

1. Set the receiver into pairing mode. Pairing mode will remain active for 10 seconds. This can be done using any of the following methods:

- Switch the power supply on.
- Press and hold the “SET” button.

- Press the “Push” switch to turn the light on.


2. Within 3 seconds, press your chosen zone button on the remote control 5 times.

3. The light will blink quickly 10 times to confirm successful pairing.

If the light fixture does not blink, it means the pairing has failed. Please repeat the steps.

Function

Single Colour

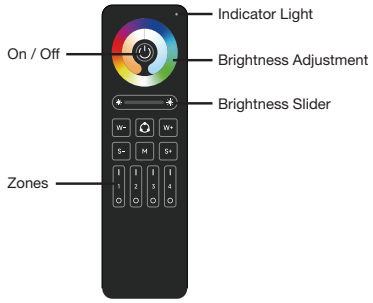

5 levels of brightness adjustment.
(The first press will set the closest brightness).


M — Dynamic modes: 1. Gradient / 2. Jump

S- S+ — In dynamic mode, speed+ or speed-.

W- W+ — Short Press: 8 levels to adjust brightness.
Long Press: Slow dimming the brightness.

Select the zone & turn on the light.
Select the zone & turn off the light.

Dual Colour

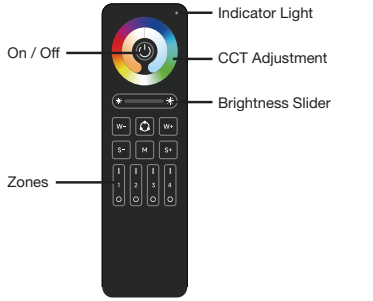

5 levels of colour temperature adjustment.
(The first press will set the closest colour).


M — Dynamic mode:
1. Dual colour temperature gradient
2. Warm White Gradient
3. Daylight White Gradient
4. Cool White Gradient.

S- S+ — In dynamic mode, speed+ or speed-.

W- W+ — Short Press: 8-step colour adjustment
Long Press: W- (Slow dimming to Warm White);
W+ (Slow dimming to Cool White).

Select the zone & turn on the light.
Select the zone & turn off the light.

RGB/RGBW

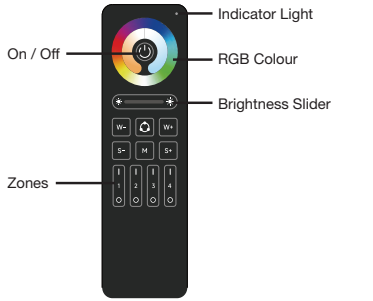

Red / Orange / Yellow / Green / Cyan / Blue / Purple / Warm White / Daylight White / Cool White
(Press this button for the first time to switch to the closest colour, then it will cycle through the colours in sequence).


M — Dynamic Mode:
1. Frenzy 2. Seven Colour Gradient 3. Multicolour Jump 4. Gem 5. Twilight 6. Relax 7. Dance 8. Party 9. Three Colour Gradient 10. Dual Colour Gradient.

S- S+ — In dynamic mode, speed+ or speed-.

W- W+ — Short Press: 8 levels to adjust brightness.
Long Press: Slow dimming the brightness.

Select the zone & turn on the light.
Select the zone & turn off the light.

RGBCCT

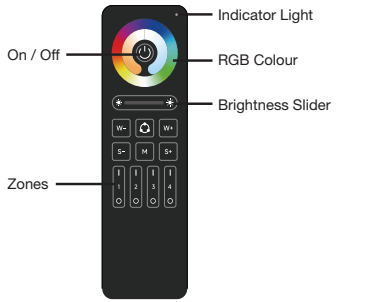

Red / Orange / Yellow / Green / Cyan / Blue / Purple / Warm White / Daylight White / Cool White
(When the current colour approaches any of the above, pressing this button for the first time will switch to that colour, then cycle through the sequence)

M — Dynamic Mode:
1. Frenzy 2. Seven Colour Gradient 3. Multicolour Jump 4. Gem 5. Twilight 6. Relax 7. Dance 8. Party 9. Three Colour Gradient 10. Dual Colour Gradient.

S- S+ — In dynamic mode, speed+ or speed-.

W- W+ — Short Press: 8 levels to adjust brightness.
Long Press: Slow dimming the brightness.

Select the zone & turn on the light.
Select the zone & turn off the light.