



EXTRUSION

80497, 80498, 80499, 80500, 80501, 94946, 94947, 94948, 94949
97732, 97734, 97735, 97736, 97737, 97738, 97739, 102665, 102666, 102667, 102668


Surface

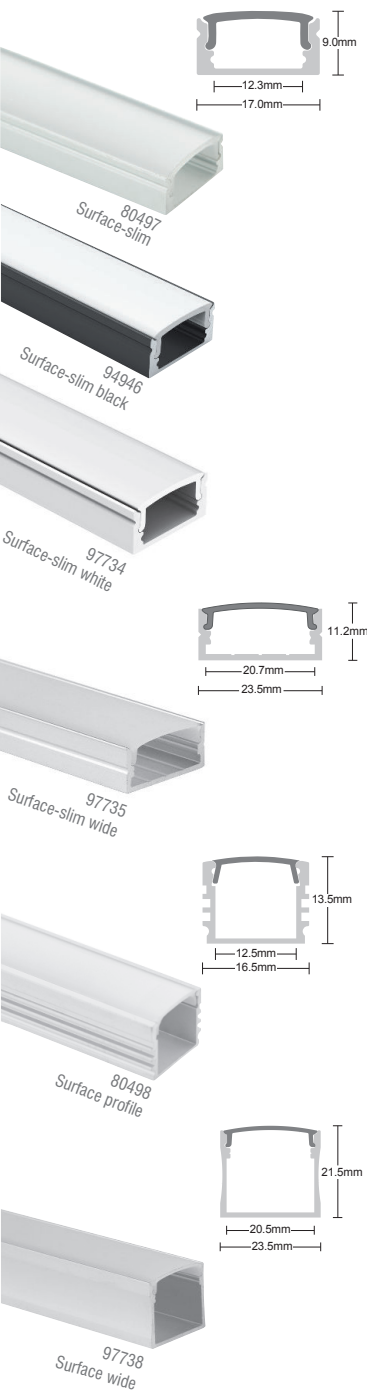


Recessed

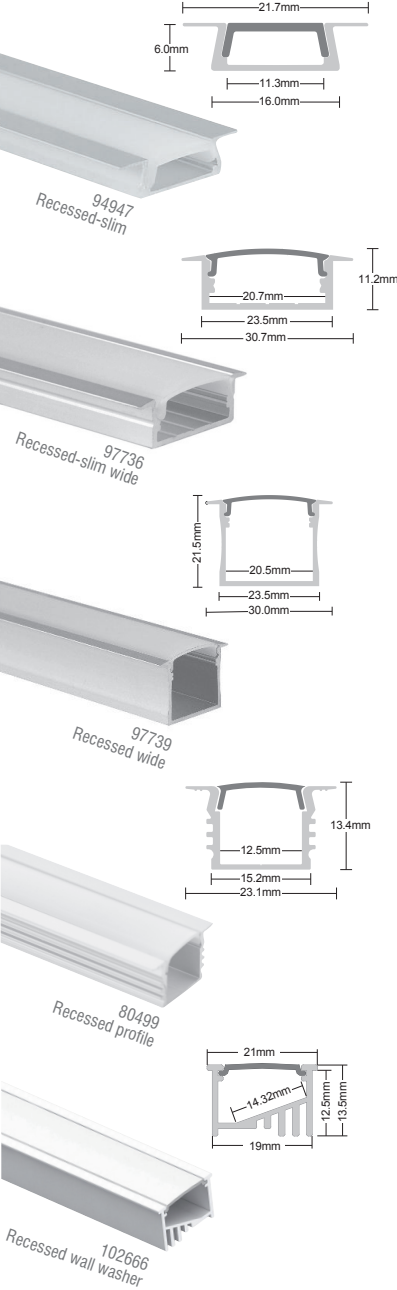


Corner

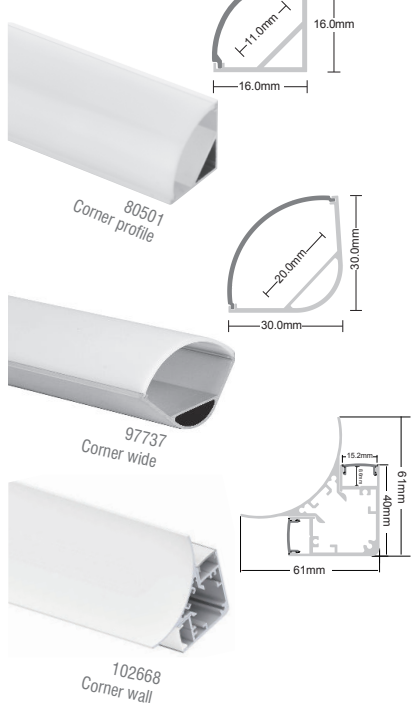

Plaster-in

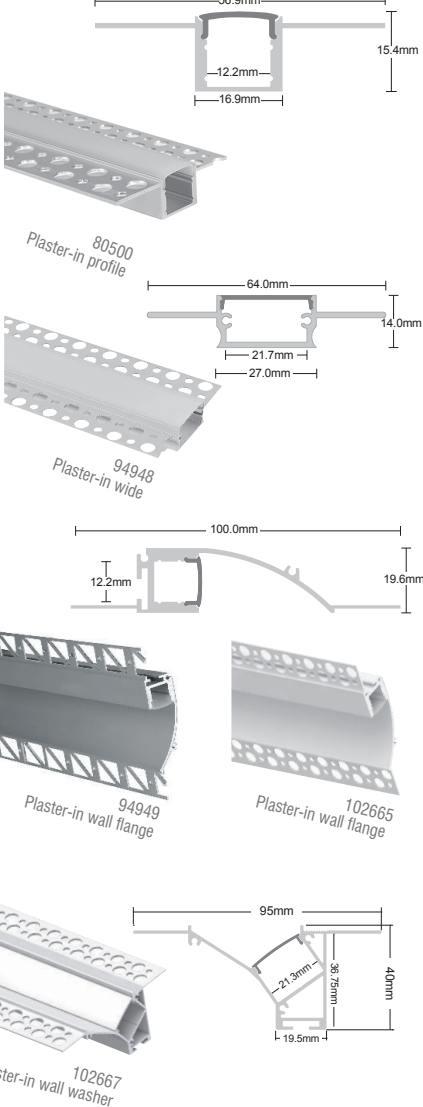

Bendable

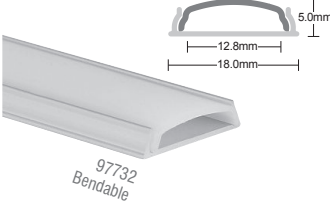


Thank you for purchasing this accessory. Please read the instruction carefully before use to ensure safe and satisfactory operation of this product.
Please retain these instruction for future reference.

Specification - Dimensions:

Surface - 80497: 2000mm x 17mm x 9mm	Recessed - 94947: 2000mm x 21.7mm x 6mm	Bendable - 97732: 2000mm x 18mm x 5mm	Plaster-in - 80500: 2000mm x 56.9mm x 15.4mm
94946: 2000mm x 17mm x 9mm	97736: 2000mm x 30.7mm x 11.2mm		94948: 2000mm x 64mm x 14mm
97734: 2000mm x 17mm x 9mm	97739: 2000mm x 30.0mm x 21.5mm	Corner - 80501: 2000mm x 16mm x 16mm	94949: 2000mm x 100mm x 19.6mm
97735: 2000mm x 23.5mm x 11.2mm	80499: 2000mm x 23.1mm x 13.4mm	97737: 2000mm x 30mm x 30mm	102665: 2000mm x 100mm x 29.6mm
80498: 2000mm x 16.5mm x 13.5mm	102666: 2000mm x 21mm x 13.5mm	102668: 2000mm x 61mm x 61mm	102667: 2000mm x 95mm x 40mm
97738: 2000mm x 23.5mm x 21.5mm			

Installation for Surface / Recessed / Bendable / Corner


- Choose an ideal place to mount the profile.
- Remove the 4 brackets from the fixing pack.
- Using the brackets as templates, mark and drill the position of the fixing holes.
- Ensure the mounting structure is capable of holding the weight of the product. Take care to avoid damaging any concealed wiring and pipes.
- Attach both brackets to the chosen mounting surface using the plastic plugs and screws (not supplied) according to the following installation diagram.
- Remove the backing off of the chosen LED module strip and stick down inside the aluminium profile.
- Attach diffuser to the profile, sliding into the profile grooves.
- Place end caps onto the ends of the fitting.
- Push profile onto the brackets to secure.
- Your fitting is now ready for use.

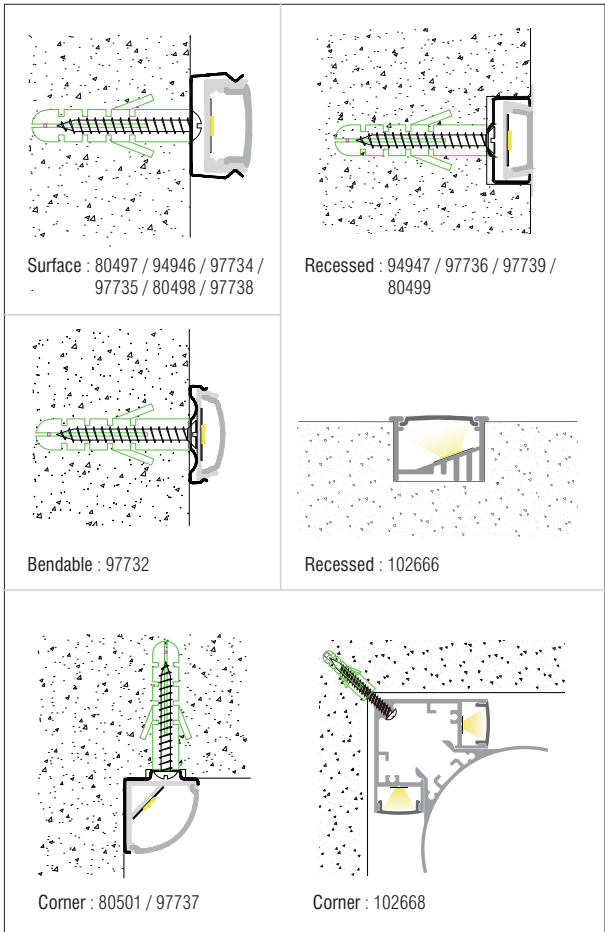

* Product images may vary.

Installation for Plaster-in

- Using the aluminium profile as templates, mark and drill the position of the fixing holes.
- Ensure the mounting structure is capable of holding the weight of the product. Take care to avoid damaging any concealed wiring and pipes.
- Remove the backing off of the chosen LED module strip and stick down inside the aluminium profile.
- Attach diffuser to the profile, sliding into the profile grooves.
- Place end caps onto the ends of the fitting.
- Push the aluminum profile into the existing groove.
- Then use the plastic plugs and screws (not supplied) to fix the aluminum profile to the wall.
- Cemented the sides of the aluminum profile.

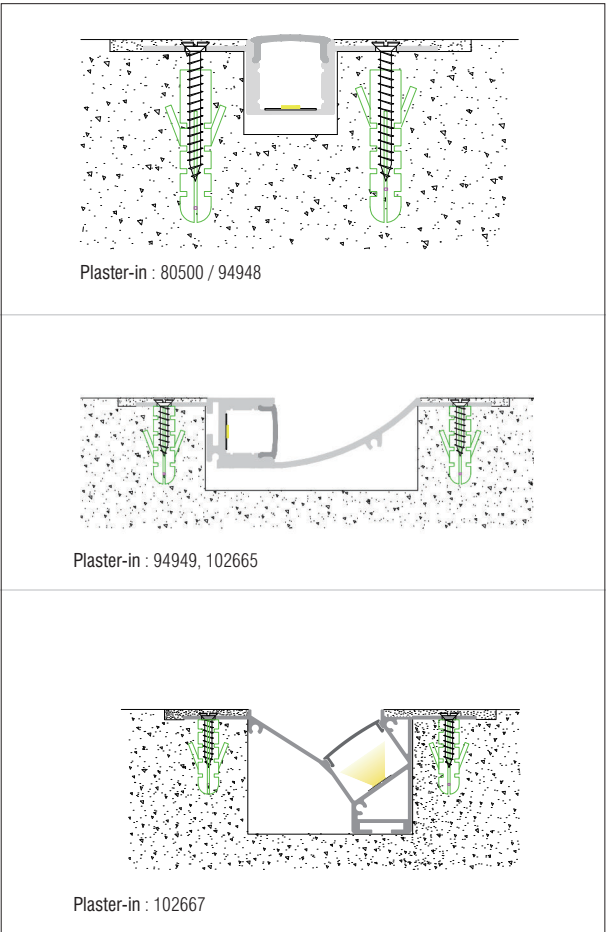

* Product images may vary.

Care and Safety

We recommend cleaning with a soft dry cloth. Do not use solvents or abrasive cleaners as these could damage the finish.
For your safety, always switch off the power supply before changing lightbulbs, or cleaning.