


1 Technical information


<b>Part Number</b>	<b>ABTR</b>
<b>Barcode</b>	5060523520084
<b>Rating (A)</b>	8V 1A 12V 0.67A 24V 0.33A
<b>Voltage(V)</b>	230V/ 50Hz
<b>IP RATING</b>	<b>IP20</b> EN 60529
<b>Mounting</b>	35mm top hat din rail
<b>Installation</b>	Vertical
<b>Torque (switch terminals)</b>	<b>1.5Nm</b>
<b>Maximum cable</b>	4mm <sup>2</sup>
<b>Power consumption (W)</b>	0.9
<b>Ambient temperature</b>	-5°C~ +40°C
<b>Complies with</b>	EN 61558-2-8/ EN 61558-1
<b>Recommended for domestic use only !</b>	

1a Dimensions

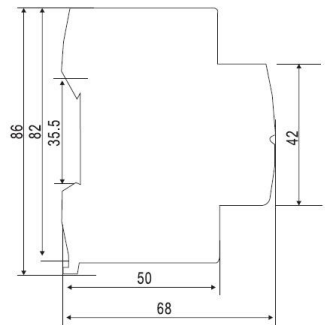

Connections

8V 1A :	1 2
12V 0.67A :	1 3
24V 0.33A :	1 4

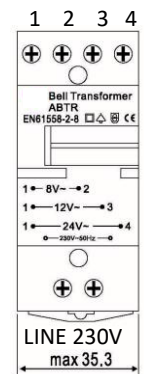

1b Bell Transformer must be installed by a qualified electrician in accordance with the current IET Wiring Regulations BS 7671.

1c Total load must not exceed the rating of the bell transformer or any additional limitation.

**2 Installation**

2a Switch OFF mains power before installation.

2b Bell Transformer must be mounted vertically in a suitable enclosure with din rail.

2c Ensure main connections are connected to bottom terminals, as shown in the diagram, and are secure and correctly torqued. Ensure that no insulation is trapped within the terminal cage.

2d Select the output voltage required (**8V, 12V or 24V**) for your bell and connect to the corresponding top terminals. Again ensure only bare wire is tightened in the terminal cages and that ALL connections are correctly torqued.

2e Check ALL connections before switching ON mains power.

**3 Testing**

3a On completion of the installation, it must be tested in accordance with the latest edition of the IET Wiring Regulations for Electrical Installations (BS 7671).



**Environment**

WASTE ELECTRICAL PRODUCTS SHOULD NOT BE DISPOSED OF IN HOUSEHOLD WASTE. CONTACT YOUR RETAILER OR LOCAL AUTHORITY FOR RECYCLING INFORMATION.



FuseBox  
[www.fusebox.co.uk](http://www.fusebox.co.uk)